 


# EZ-Remote JOYSTICK

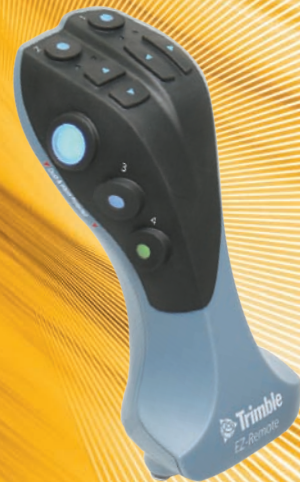

QUICK REFERENCE CARD

 


## FmX integrated display with the EZ-Remote joystick



FmX to CAN cable  
with port replicator  
(P/N 72420)

## EZ-Guide 250/500 lightbar guidance system with the EZ-Remote joystick

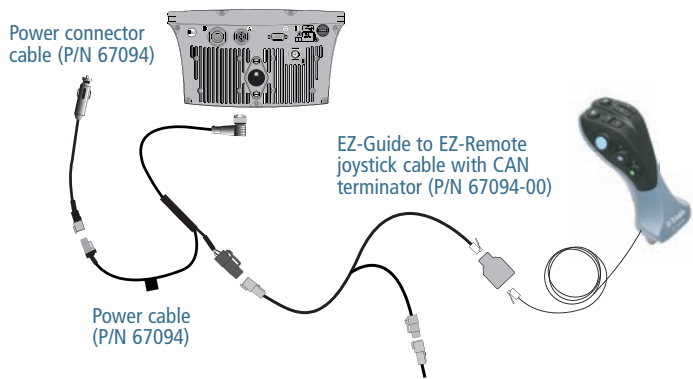

Power connector  
cable (P/N 67094)

EZ-Guide to EZ-Remote  
joystick cable with CAN  
terminator (P/N 67094-00)

Power cable  
(P/N 67094)

QUICK REFERENCE CARD



P/N 79527-00-ENG





Button	Function on EZ-Guide® 250/ 500 system
Engage	Engage auto steering.
Up	<b>Setup and Configuration screens:</b> Toggle through selections. <b>Run screen:</b> Toggle through buttons on right side of screen. <b>Pan mode:</b> Pan up.
Down	<b>Setup and Configuration screens:</b> Toggle through selections. <b>Run screen:</b> Toggle through buttons on right side of screen. <b>Pan mode:</b> Pan down.
Right	<b>Setup and Configuration screens:</b> Not functional. <b>Run screen:</b> Nudge right. <b>Pan mode:</b> Pan right.
Left	<b>Setup and Configuration screens:</b> Not functional. <b>Run screen:</b> Nudge left. <b>Pan mode:</b> Pan left.
Trigger	OK
1-4	Programmable.

On the FmX® integrated display, all buttons can be programmed.

## EZ-Guide 250 or EZ-Guide 500 system

**Note:** Cable with CAN terminator (P/N 67094-00) is required.

### Programming buttons 1-4

1. Select *Configuration / System / EZ-Remote / EZ-Remote Keypad Assignment Wizard*.
2. Select the required function to assign to buttons 1-4 and then press **OK** on the display, or press the trigger button on the joystick.

### Adjusting LED brightness

1. Select *Configuration / System / EZ-Remote / EZ-Remote LED Brightness*.
2. Use the slider bar to adjust the brightness of the LED lights on the joystick.

### Viewing button assignments and joystick details

Select *Configuration / Status / EZ-Remote Status*. This screen shows details about your EZ-Remote joystick and the functions that are currently assigned to buttons 1-4.

## FmX integrated display

**Note:** Cable (P/N 72420) is required.

### Programming buttons

1. In the *Display Setup* screen, select *External Keypad* and then tap **Setup**. The *Keypad Assignment* screen appears.
2. On the EZ-Remote joystick, press the first button you want to program. On the FmX display, tap the feature you want to assign. Tap **Set** and then tap **OK**.
3. Repeat Step 2 for each button.

### Adjusting LED brightness

In the *Keypad Assignment* screen, use the slider bar to adjust the brightness of the LED lights on the EZ-Remote joystick.

## Standard mount

1. Select a mounting location on the console of your tractor cab. When mounted, the EZ-Remote joystick should be in a location that the operator can comfortably reach.
2. Install the EZ-Remote joystick using the supplied RAM mount and hardware.



## Optional extended mount (P/N 80104)

If you do not have space on your console, or do not want to attach the RAM mount to your console, an extended mount is available for purchase.

